


AIRCRAFT PARKING /
DOCKING CHART -ICAOAPRON ELEV
9.0 mTWR 118.7
SMC 121.9KATUNAYAKE/BANDARANAIKE INTERNATIONAL
AIRPORT COLOMBO

ELEVATIONS IN METERS

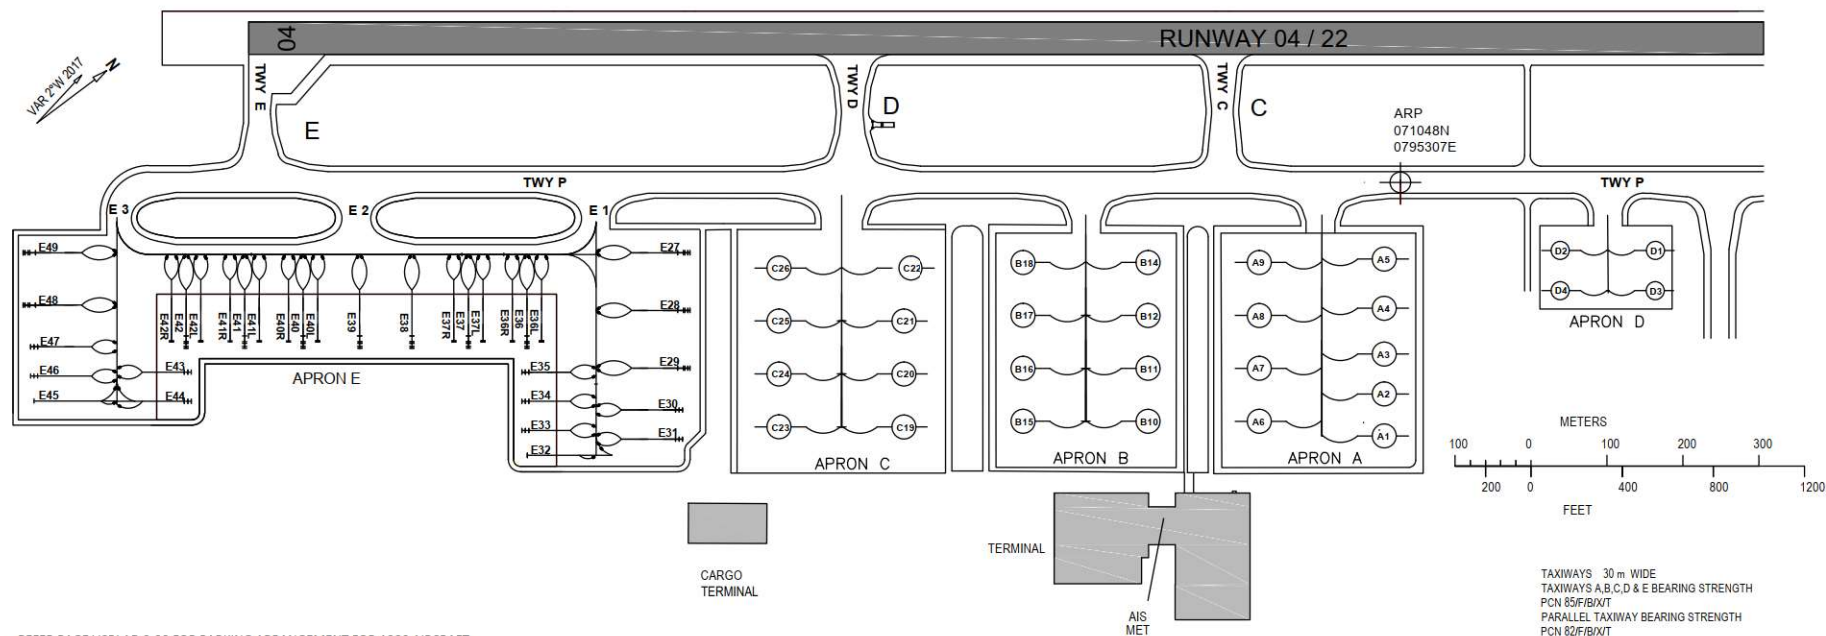

REFER PAGE VCBI AD 2-39 FOR PARKING ARRANGEMENT FOR A380 AIRCRAFT

PARKING STAND	INS COORDINATES FOR AIRCRAFT STAND	BEARING STRENGTH
APRON A		
A1	07 10 39.91N 079 53 13.51E	PCN 64.5/R/B/X/T
A2	07 10 40.54N 079 53 12.21E	PCN 64.5/R/B/X/T
A3	07 10 41.93N 079 53 10.78E	PCN 64.5/R/B/X/T
A4	07 10 43.12N 079 53 09.22E	PCN 64.5/R/B/X/T
A5	07 10 44.32N 079 53 07.66E	PCN 64.5/R/B/X/T
A6	07 10 33.84N 079 53 08.47E	PCN 64.5/R/B/X/T
A7	07 10 35.02N 079 53 06.75E	PCN 57/R/B/X/T
A8	07 10 36.45N 079 53 04.88E	PCN 45/R/B/X/T
A9	07 10 37.89N 079 53 03.00E	PCN 64.5/R/B/X/T
APRON B		
B10	07 10 31.90N 079 53 06.93E	PCN 45/R/B/X/T
B11	07 10 33.19N 079 53 05.11E	PCN 45/R/B/X/T
B12	07 10 34.61N 079 53 03.78E	PCN 57/R/B/X/T
B14	07 10 36.08N 079 53 01.61E	PCN 57/R/B/X/T
B15	07 10 26.28N 079 53 02.60E	PCN 57/R/B/X/T
B16	07 10 27.60N 079 53 00.81E	PCN 57/R/B/X/T
B17	07 10 28.99N 079 52 59.00E	PCN 57/R/B/X/T
B18	07 10 30.38N 079 52 57.10E	PCN 57/R/B/X/T

PARKING STAND	INS COORDINATES FOR AIRCRAFT STAND	BEARING STRENGTH
APRON C		
C19	07 10 23.73N 079 53 00.98E	PCN 70/R/B/X/T
C20	07 10 24.91N 079 52 58.33E	PCN 70/R/B/X/T
C21	07 10 26.30N 079 52 57.51E	PCN 70/R/B/X/T
C22	07 10 27.88N 079 52 55.44E	PCN 70/R/B/X/T
C23	07 10 16.91N 079 52 55.75E	PCN 70/R/B/X/T
C24	07 10 18.18N 079 52 54.18E	PCN 70/R/B/X/T
C25	07 10 19.58N 079 52 52.36E	PCN 70/R/B/X/T
C26	07 10 21.16N 079 52 50.29E	PCN 70/R/B/X/T
APRON D		
D1	07 10 53.95N 079 53 14.31E	PCN 55/R/B/X/T
D2	07 10 49.96N 079 53 11.27E	PCN 55/R/B/X/T
D3	07 10 53.00N 079 53 15.55E	PCN 55/R/B/X/T
D4	07 10 49.02N 079 53 12.49E	PCN 55/R/B/X/T


PARKING STAND	INS COORDINATES FOR AIRCRAFT STAND	BEARING STRENGTH
APRON E		
E27	07 10 19.11N 079 52 48.41E	PCN 86.8/R/B/X/T
E28	07 10 17.53N 079 52 50.48E	PCN 86.8/R/B/X/T
E29	07 10 15.95N 079 52 52.55E	PCN 86.8/R/B/X/T
E30	07 10 14.80N 079 52 54.05E	PCN 86.8/R/B/X/T
E31	07 10 14.00N 079 52 55.10E	PCN 86.8/R/B/X/T
E32	07 10 07.35N 079 52 50.93E	PCN 86.8/R/B/X/T
E33	07 10 08.03N 079 52 50.04E	PCN 86.8/R/B/X/T
E34	07 10 08.83N 079 52 48.99E	PCN 86.8/R/B/X/T
E35	07 10 09.63N 079 52 47.94E	PCN 86.8/R/B/X/T
E36L	07 10 10.95N 079 52 47.80E	PCN 86.8/R/B/X/T
E36	07 10 10.43N 079 52 47.40E	PCN 86.8/R/B/X/T
E36R	07 10 09.90N 079 52 47.00E	PCN 86.8/R/B/X/T
E37L	07 10 08.86N 079 52 46.20E	PCN 86.8/R/B/X/T
E37	07 10 08.33N 079 52 45.79E	PCN 86.8/R/B/X/T
E37R	07 10 07.81N 079 52 45.39E	PCN 86.8/R/B/X/T
E38	07 10 06.31N 079 52 44.24E	PCN 86.8/R/B/X/T
E39	07 10 04.44N 079 52 42.81E	PCN 86.8/R/B/X/T
E40L	07 10 02.94N 079 52 41.66E	PCN 86.8/R/B/X/T
E40	07 10 02.41N 079 52 41.26E	PCN 86.8/R/B/X/T

PARKING STAND	INS COORDINATES FOR AIRCRAFT STAND	BEARING STRENGTH
APRON E		
E40R	07 10 01.89N 079 52 40.86E	PCN 86.8/R/B/X/T
E41L	07 10 00.84N 079 52 40.06E	PCN 86.8/R/B/X/T
E41	07 10 00.32N 079 52 39.65E	PCN 86.8/R/B/X/T
E41R	07 09 59.80N 079 52 39.25E	PCN 86.8/R/B/X/T
E42L	07 09 58.75N 079 52 38.45E	PCN 86.8/R/B/X/T
E42	07 09 58.23N 079 52 38.05E	PCN 86.8/R/B/X/T
E42R	07 09 57.70N 079 52 37.65E	PCN 86.8/R/B/X/T
E43	07 09 57.91N 079 52 38.96E	PCN 86.8/R/B/X/T
E44	07 09 57.11N 079 52 40.01E	PCN 86.8/R/B/X/T
E45	07 09 50.92N 079 52 35.24E	PCN 86.8/R/B/X/T
E46	07 09 51.60N 079 52 34.35E	PCN 86.8/R/B/X/T
E47	07 09 52.40N 079 52 33.30E	PCN 86.8/R/B/X/T
E48	07 09 53.55N 079 52 31.79E	PCN 86.8/R/B/X/T
E49	07 09 54.98N 079 52 29.92E	PCN 86.8/R/B/X/T

SAFEDOCK VDGS AND
PASSENGER BOARDING BRIDGES AVBL
AT PARKING STANDS A6, A7, A8, A9
B10, B11, B12 AND B14

Change -Apron E and TWY P

PARKING ARRANGEMENT FOR A380 AIRCRAFT

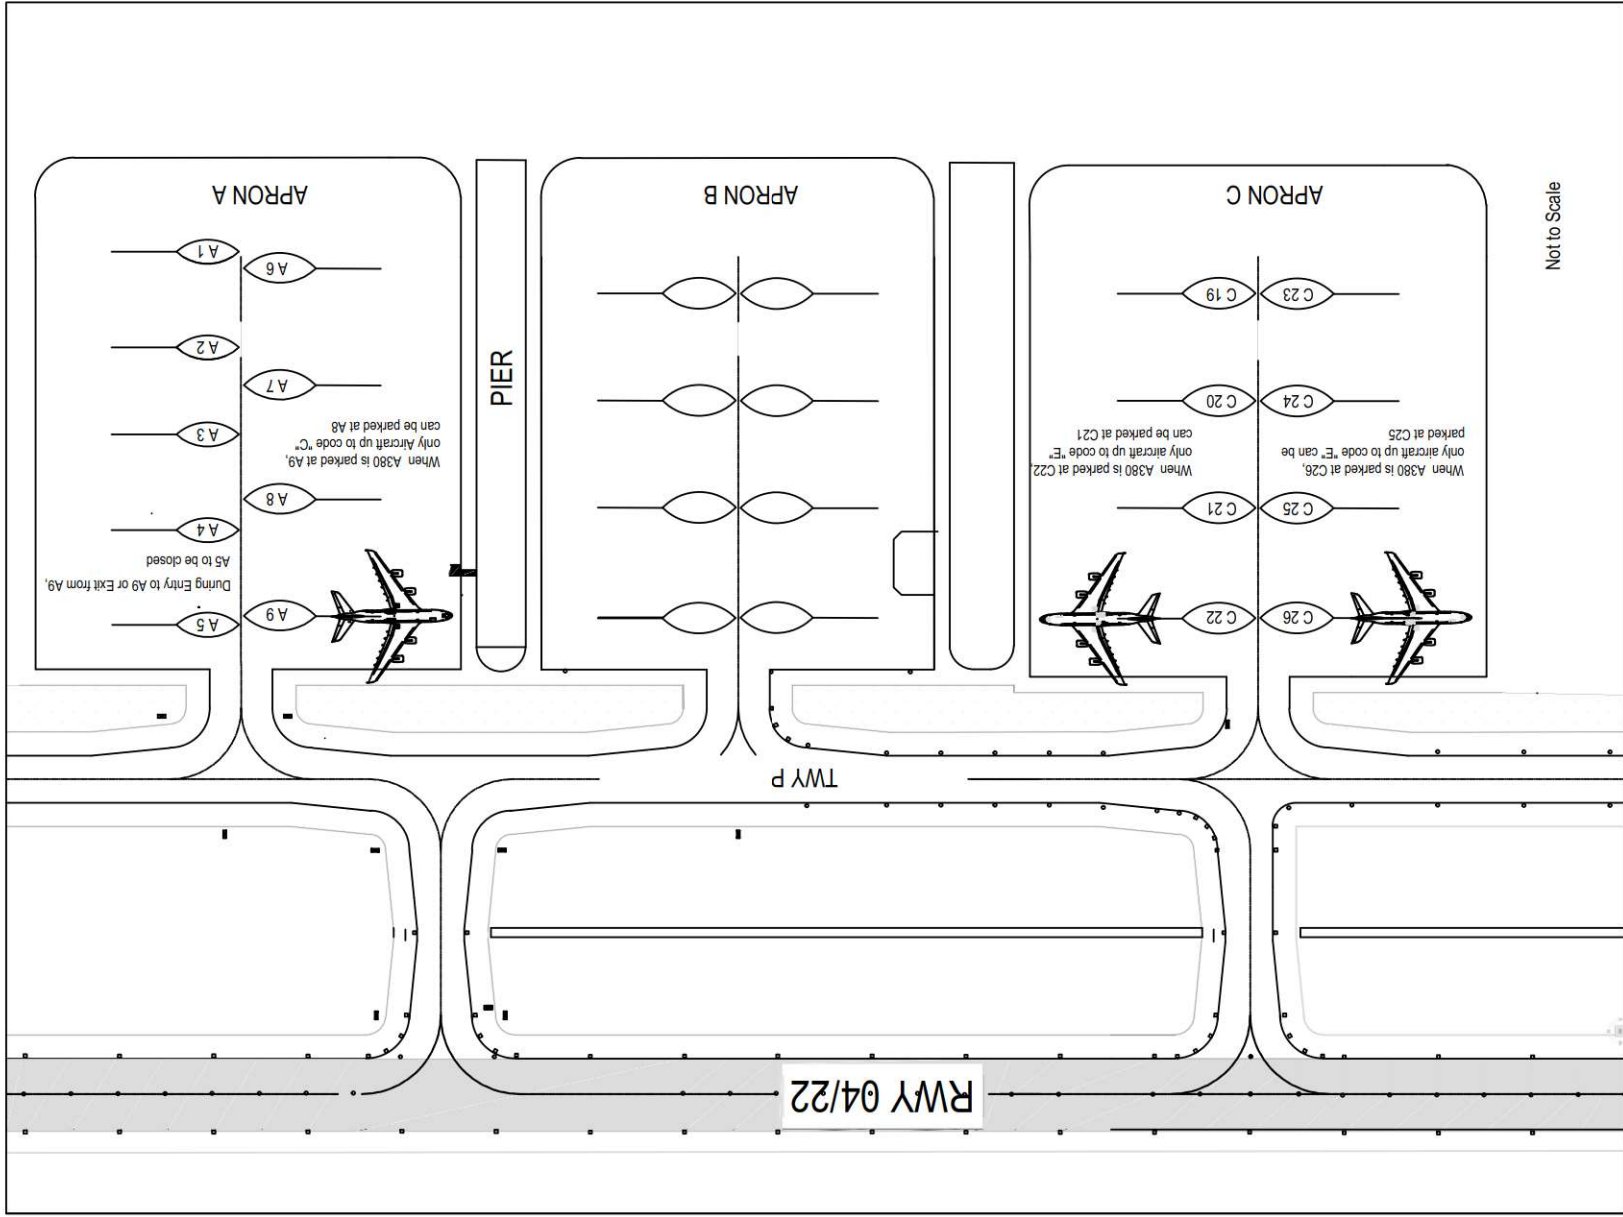

Changes : Parallel TWY retained as TWY P